

Xerox® VersaLink® C505/C605

Color Multifunction Printer • Imprimante multifonctions couleur • Stampante multifunzione a colori • Multifunktions-Farldrucker • Impresora multifunción de color • Impressora multifuncional de color • Impresora multifuncional colorida • Multifunctionele kleurenprinter • Multifunktionsdrucker mit Farbe • Flerfunksjons fargekriver • Multifunkcijsnočnoe četvetoje ustroystvo • Barevná multifunkční tiskárna • Wielofunkcyjny drukarka kolorowa • Többfunkciós színes nyomtató • Imprimantă multifuncțională color • Renkli Çok İşlevli Yazıcı • ئېھىرىمۇس پەلەئەتپۈرۈگۈچ ئېكىتىۋاتىچى • طابعة متعددة الوظائف باللون •


Installation Guide Guide d'installation

Italiano Guida d'installazione
Deutsch Installationsanleitung
Español Guía de instalación
Català Guia d'instalació
Português Guia de instalação
Nederlands Installatiehandleiding
Svenska Installationshandbok
Norsk Installasjonshåndbok
Dansk Installationsvejledning


Finnish Asennusopas
Russkiy Руководство по установке
Český Instalační příručka
Polski Instrukcja instalacji
Magyar Telepítési útmutató
Română Ghid de instalare
Türkçe Kurulum Kilavuzu
Ελληνικά Οδηγός εγκατάστασης
العربية دليل التثبيت




- 1** Select a Location.
 1 Selectez l'emplacement.
 2 Selezione una posizione.
 3 Standort auswählen.
 4 Seleccione la ubicación.
 5 Selecione um local.
 6 Kies een locatie.
 7 Wybierz lokalizację.
 8 Välj en plats.
 9 Vælg en placering.
 10 Valitse sijoituspaikka.
 11 Виберіть місце.
 12 Zvolte umístění přístroje.
 13 Wybierz lokalizację.
 14 Válassza ki a nyomtató helyét.
 15 Selectați o locație.
 16 Bir Konum seçin.
 17 Επιλέξτε θέση για τον εκτυπωτή.
 18 حدد موقعًا.

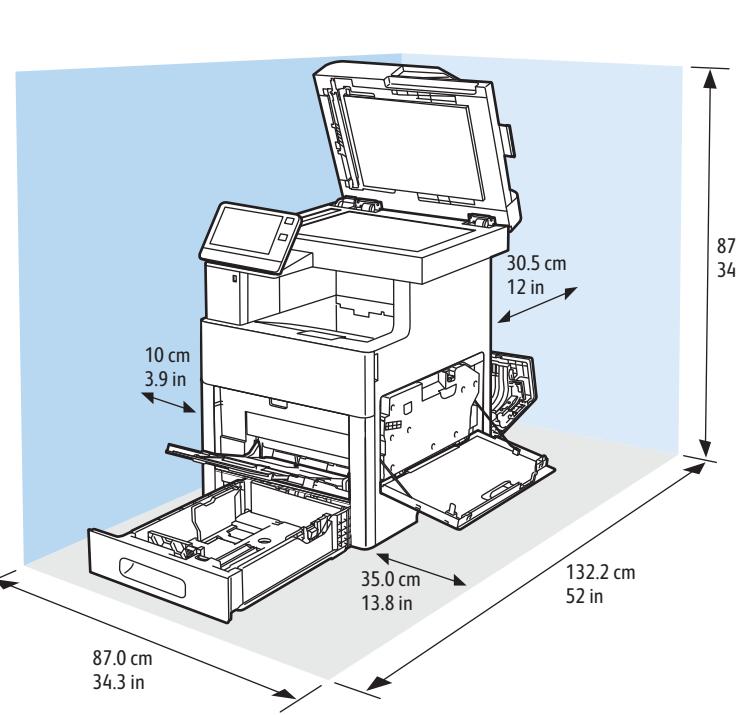



Xerox® VersaLink® C505

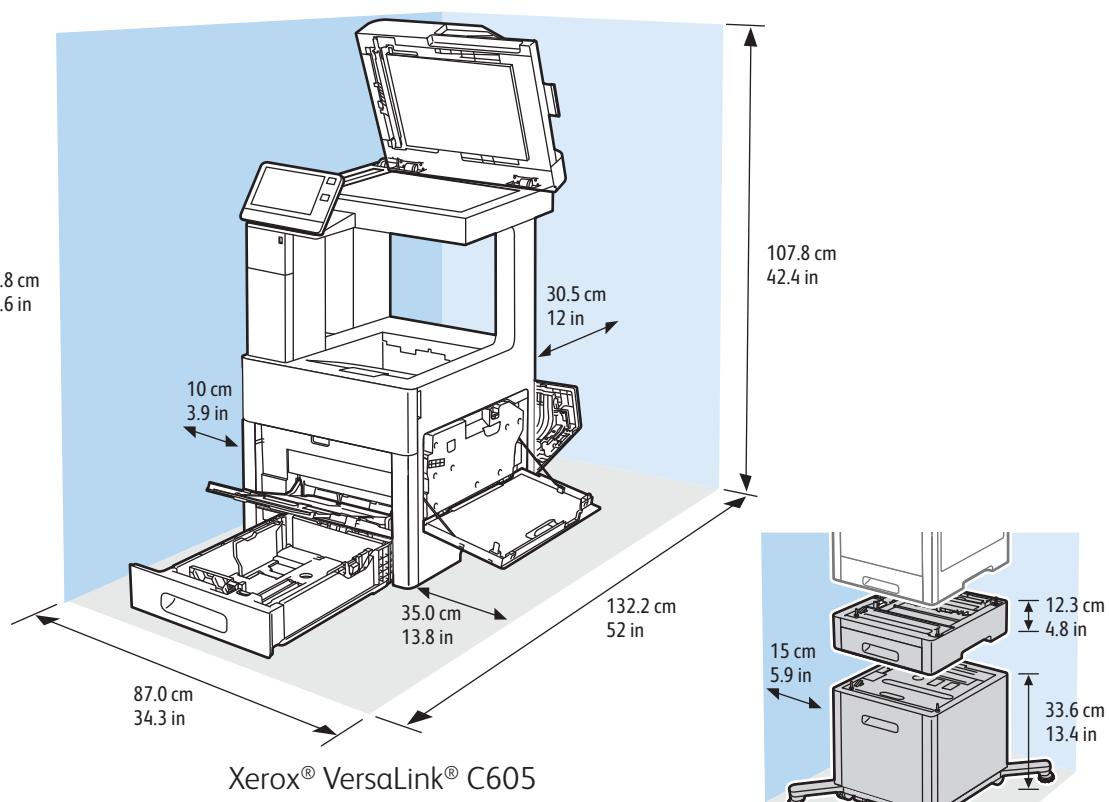


Xerox® VersaLink® C605

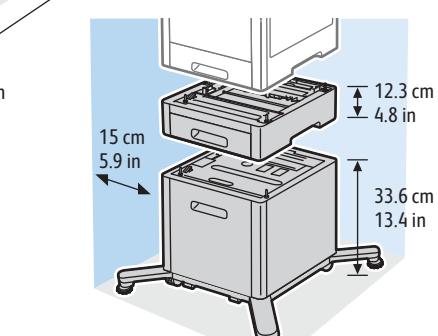



www.xerox.com/rrr

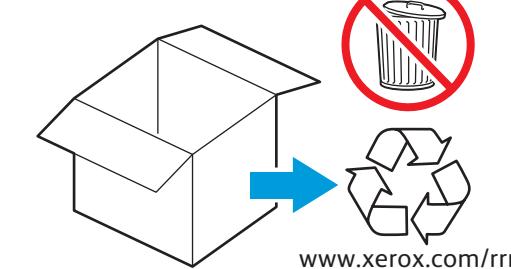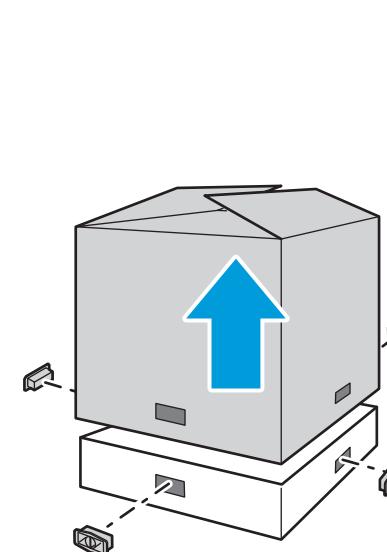

- 2** Remove the packing material.
 1 Retirez le matériel d'emballage.
 2 Rimuovere il materiale di imballaggio.
 3 Verpackung entfernen.
 4 Quite el material de embalaje.
 5 Traiga el material de embalaje.
 6 Remova o material de embalagem.
 7 Verwijder het verpakkingsmateriaal.
 8 Ta bort förpackningsmaterialet.
 9 Fjern emballasjen.
 10 Fjern emballagen.
 11 Poista pakkausmateriaali.
 12 Снять упаковочный материал.
 13 Odstraňte balicí materiál.
 14 Usuňte opakovanie.
 15 Távolítsa el a csomagolóanyagokat.
 16 Îndepărtați ambalajul.
 17 Ambalaj meryavalıńı qızarıń.
 18 Αφαιρέστε το υλικό της συσκευασίας.
 19 أزّل مواد التغليف.

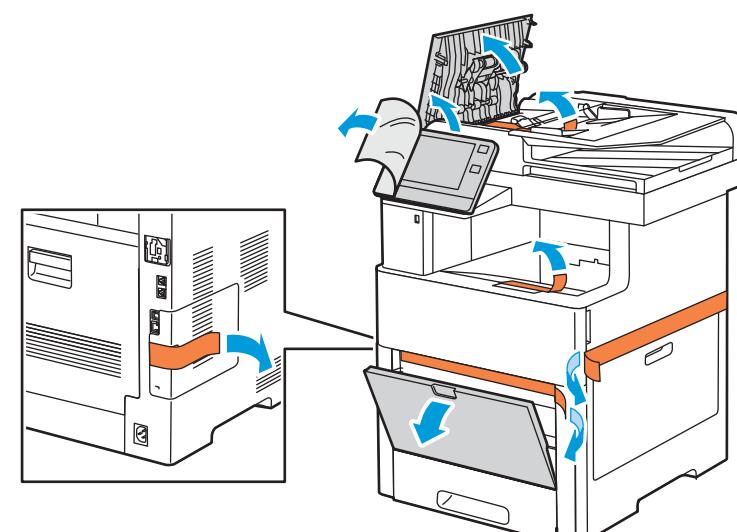


Xerox® VersaLink® C505

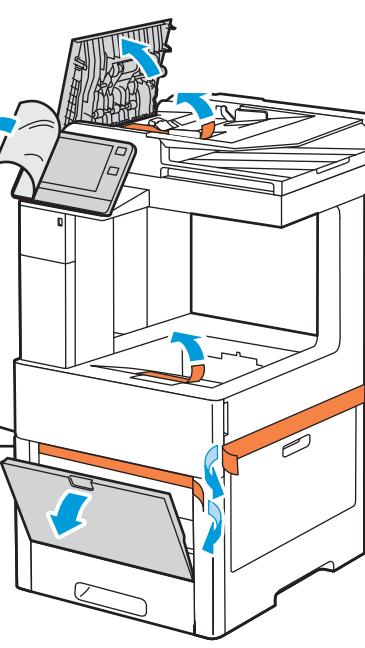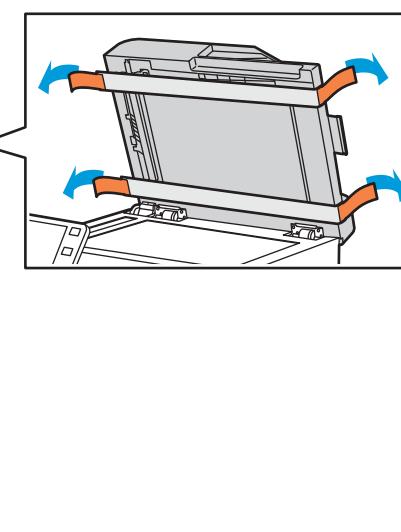


Xerox® VersaLink® C605



- 3** Install the options.
 1 Installez les options.
 2 Installare le opzioni.
 3 Optionen installieren.
 4 Instale las opciones.
 5 Instal·leu les opcions.
 6 Instale as opções.
 7 Installeer de opties.
 8 Installer alternativet.
 9 Installer alternativne.
 10 Installer muligheder og udstyr.
 11 Asenna lisälaitteet.
 12 Установить опции.
 13 Nainstalujte volby.
 14 Zainstalujte opce.
 15 Telepítse az opcionális tartozékokat.
 16 Instalați opțiunile.
 17 Seçenekleri yükleyin.
 18 Εγκαταστήστε τον προαιρετικό εξοπλισμό.
 19 ركِّب العناصر الاختيارية.

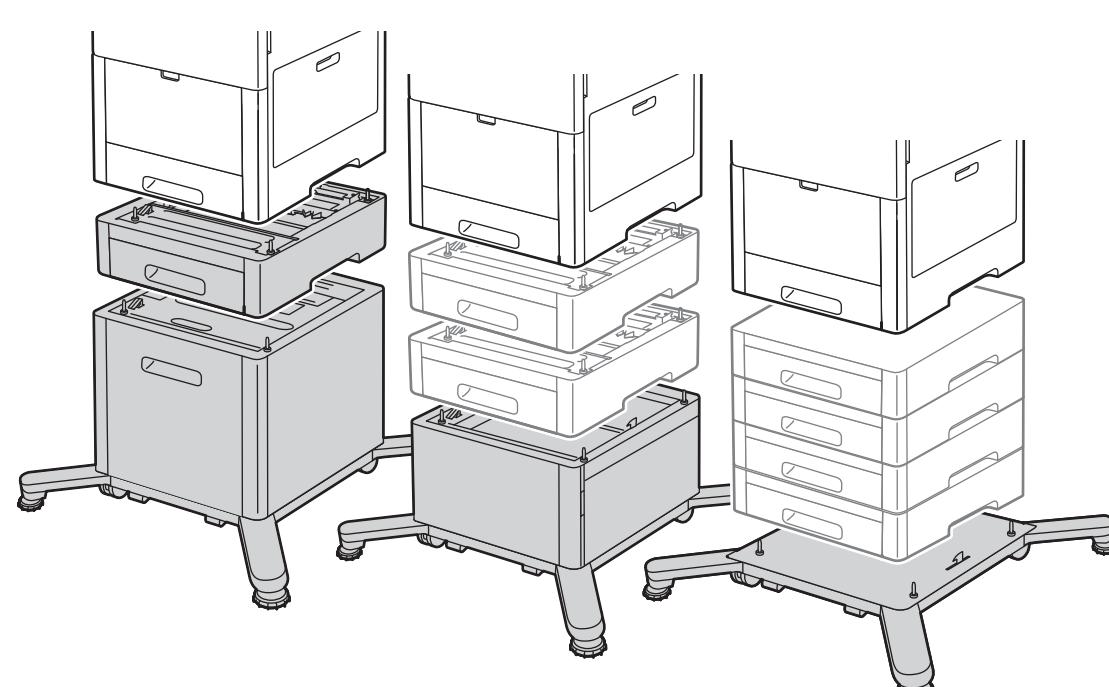

Xerox® VersaLink® C505/C605

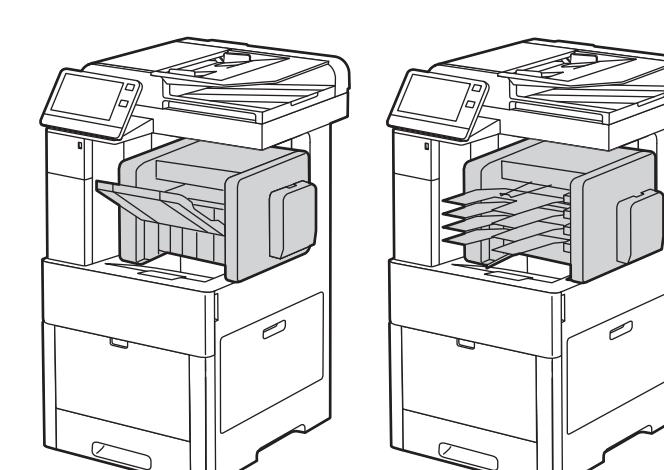

Xerox® VersaLink® C505

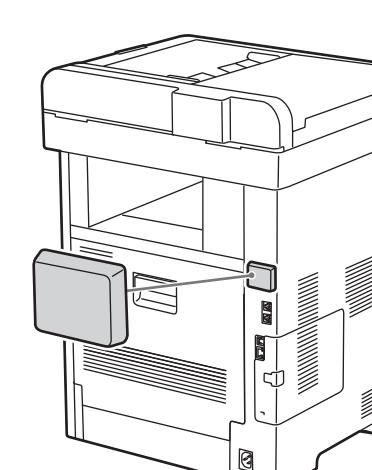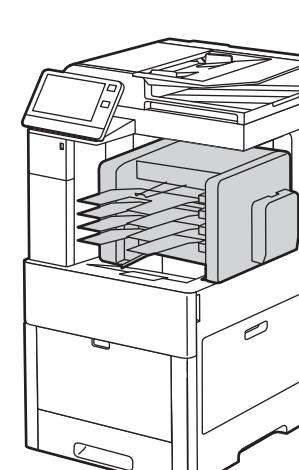

Xerox® VersaLink® C605

Wireless Network Adapter
 1 Carte réseau sans fil
 2 Adattatore di rete wireless
 3 WLAN-Adapter
 4 Adaptador de red inalámbrica
 5 Adaptador de xarxa sense fil
 6 Adaptador de rede sem fio
 7 Draadloze netwerkadapter
 8 Trådløst nätverkskort
 9 Adapter for trådløst nettverk
 10 Trådlös nätverksadaptor
 11 Langaton verkkoosivitin
 12 Адаптер беспроводной сети
 13 Adaptér bezdrátové sítě
 14 Trådlöst nätverkskort
 15 Bezprzewodowy adapter sieciowy
 16 Vezeték nélküli hálózati adapter
 17 Adaptor de rețea fără fir
 18 Kablosuz Ağ Bağlantısı
 19 Προσαρμογέας ασύρματου δικτύου
 20 مهابي الشبكة اللاسلكية

- 4** Load the paper tray.
 1 Chargez le bac papier.
 2 Caricare il vassoio carta.
 3 Druckmaterial einlegen.
 4 Cargue la bandeja de papel.
 5 Coloque la bandeja de papel.
 6 Abasteca a bandeja de papel.
 7 Plaça la paperera de paper.
 8 Fyll på pappersfacket.
 9 Legg i papirmagasinet.
 10 Sæt papirmagasinet i.
 11 Täytä paperilaukusta.
 12 Blokuj bęguły w lotku.
 13 Naplňte zásobník papíru.
 14 Založdju tačę papíru.
 15 Tölts meg a papírtálcát.
 16 Încărcați tavă de hârtie.
 17 Kağıt kasetini yükleyin.
 18 Τοποθετήστε χαρτί στο δίσκο.
 19 حمل درج الورق.

